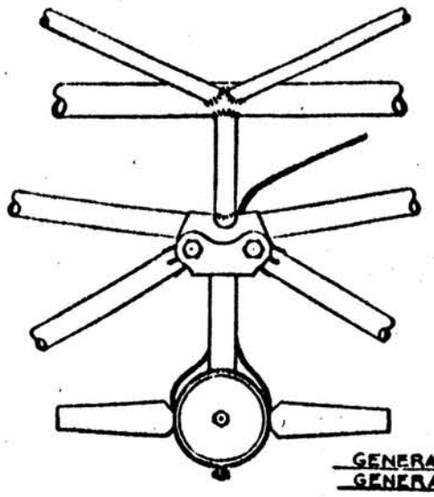

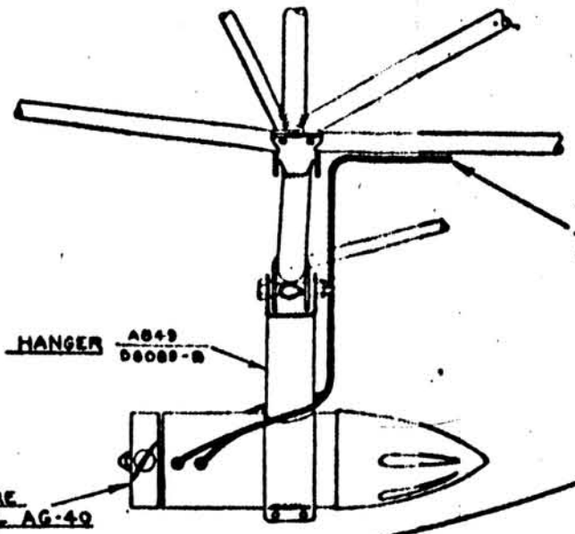

GENERATOR INSTALLATION DETAIL

FIG. 1

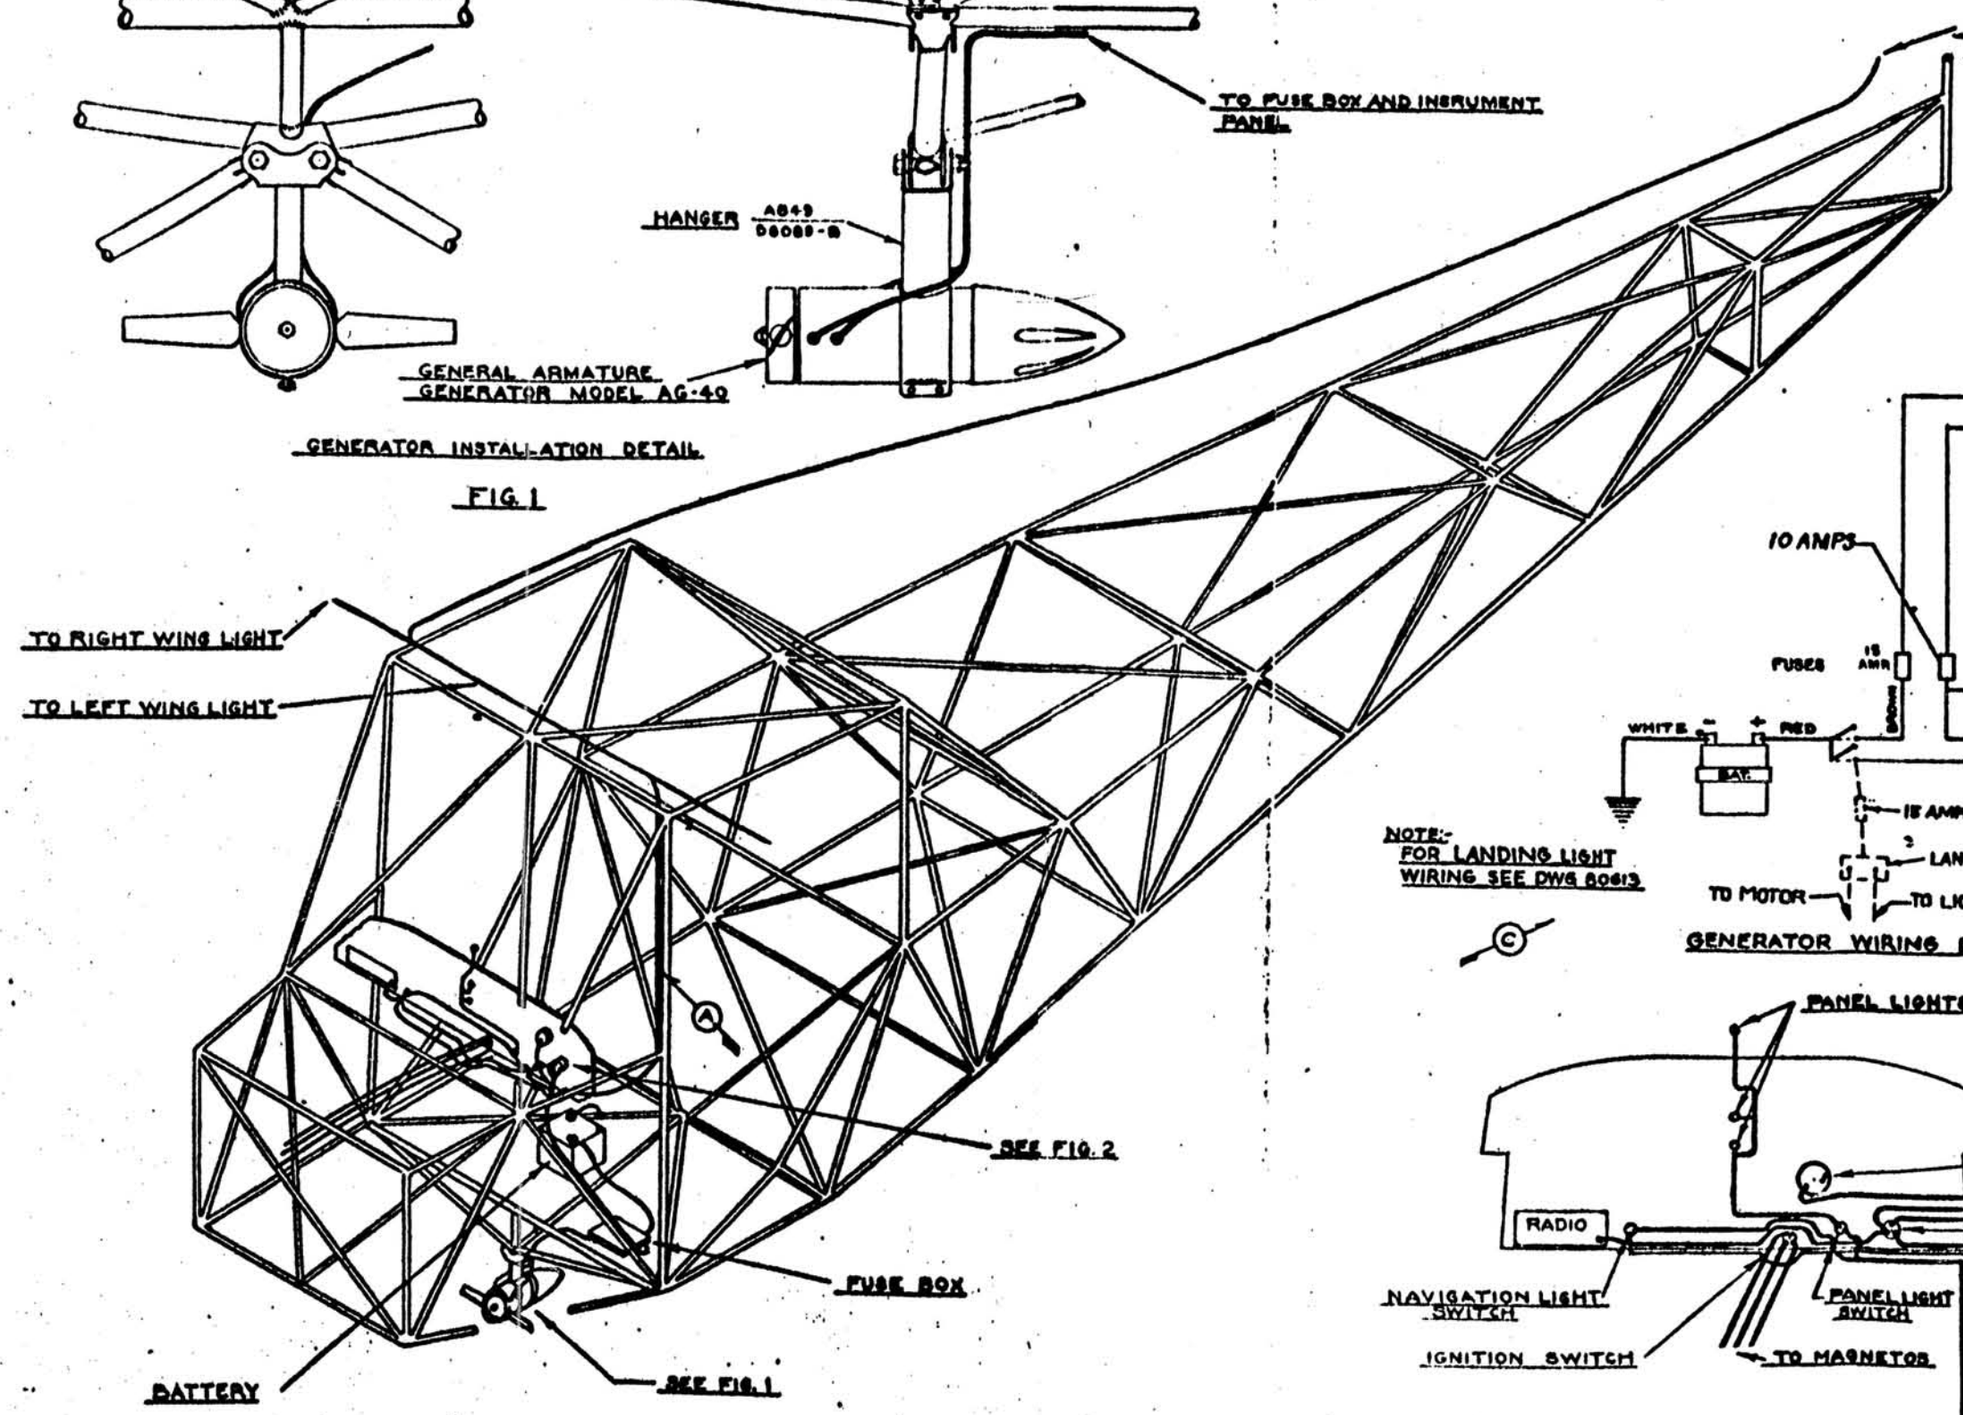

NOTE
FOR BATTERY AND FUSE BOX INSTALLATION SEE D8217-C

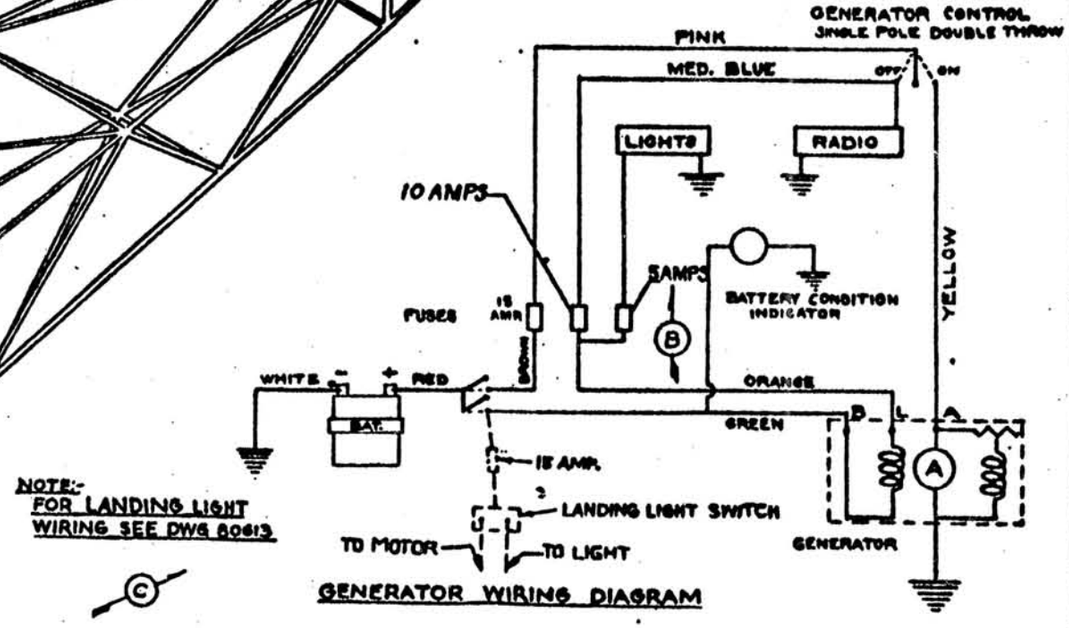

NOTE:-
FOR LANDING LIGHT WIRING SEE DWG 80613

GENERATOR WIRING DIAGRAM

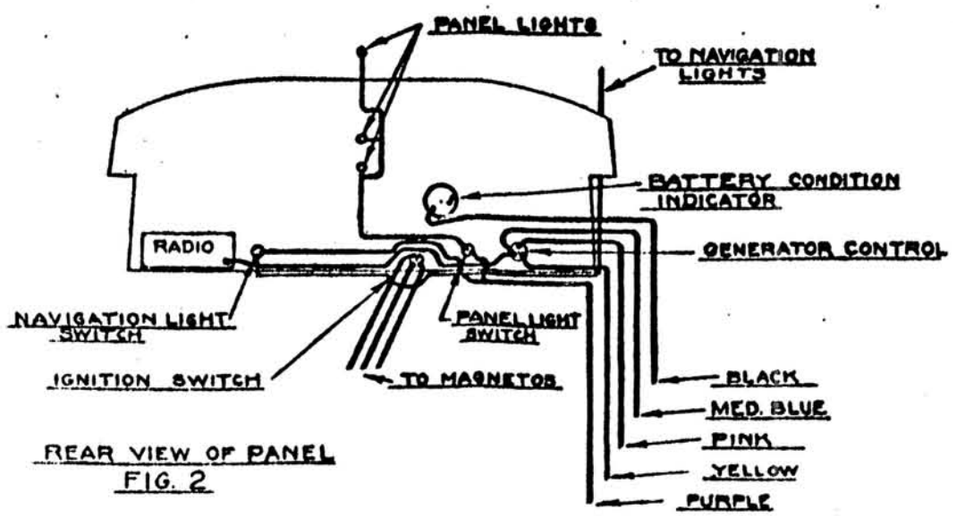

REAR VIEW OF PANEL

FIG. 2

				TOLERANCE	DO NOT SCALE	DATE OF PRINT	
				SCALE NOTED	MATERIAL	WIRING DIAGRAM	
				DIFFERENCES D8072-C	FINISH		
				1ST PRINT SHIP	WEIGHT		
				2ND LAST SHIP	No. PER SHIP		
				SUPERSEDED BY	MODELS J4		
				ON ASSEMBLY			
					PIPER AIRCRAFT CORP. LOCK HAVEN, PENNA.	D.R. 1-20-41 BRAWN / CHECKED / APPROVED	FILE D8121-C
REVISION	DATE	BY					